

*Official copies of these procedures are maintained at this website.
Before using a printed copy, verify that it is the most current
version by checking the document issue date on this website. Signed
copies of these official procedures are maintained at the Training Office.*

C-A OPERATIONS PROCEDURES MANUAL

ATTACHMENT

4.56ay Y Line Sweep Checklist

Text Pages 2 through 3

C-A OPM Procedures in which this Attachment is used.

4.56		

Hand Processed Changes

<u>HPC No.</u>	<u>Date</u>	<u>Page Nos.</u>	<u>Initials</u>
_____	_____	_____	_____
_____	_____	_____	_____
_____	_____	_____	_____

Approved: _____ **Signature On File** _____
Collider-Accelerator Department Chairman Date

P. Ingrassia, W. MacKay

Y Line Sweep Checklist

Sweeper_____


Time:_____ Date:_____

Warning:

IF any workers are encountered during the sweep, **THEN** contact the OC to see if the sweep should be aborted. Workers shall leave the enclosure **WITH** the Sweeper. **IF** the workers crash out of the enclosure **AND** do not exit with the Sweeper, **THEN** the sweep shall be re-started.

Prerequisites

- One person to perform the sweep,
- C-A-OPM-ATT4.56.ay Y line Sweep Checklist (two pages)
- Walkie-talkies
- All Doors closed THEN Y line set to Controlled Access
- Keys: Injection Sweep Reset key S/R013, Controlled Access key CA012, RHIC Sweep Reset key S/R 015.

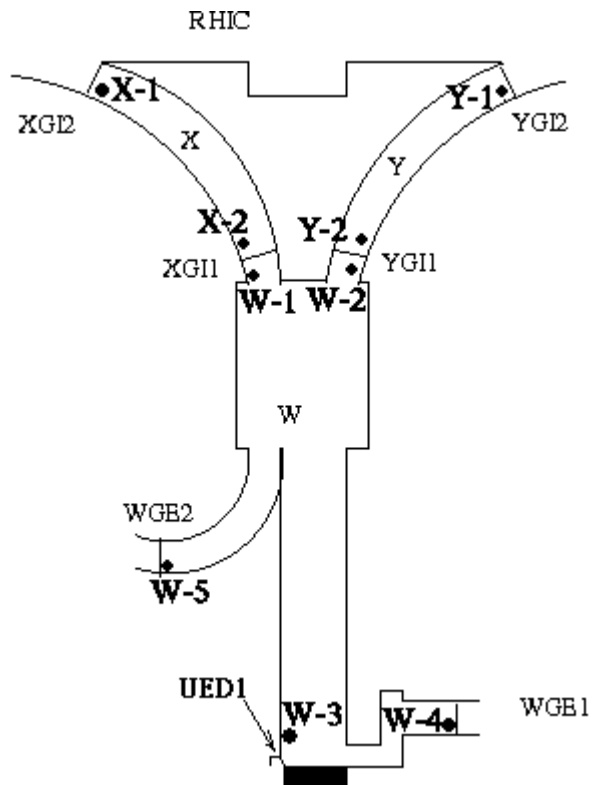

CONTINUED ON REVERSE SIDE

check

C-A-OPM-ATT 4.56.ay (Y)

Revision 00
September 28, 2000

- ___1 Sweeper goes to gate YGI1, from WGE2
- ___2 Sweeper requests simultaneous release from MCR.
- ___3 Sweeper opens YGI1 gate by turning the S/R015 key clockwise, in the Controlled Access key-switch while Operator in MCR presses simultaneous release for YGI1.
- ___4 Sweeper walks to YGI2 door.
- ___5 Sweeper resets gate YGI2 using the S/R013 key in the Reset keyswitch on YGI2-I.
- ___6 Sweeper observes RESET lamp lights after RESET.
- ___7 Sweeper STARTS SWEEP by turning the S/R013 key CW in the SWEEP key-switch on YGI2-I (YCS2) (map Y-1).
- ___8 Sweeper observes AREA SECURED lamp blink once.
- ___9 Sweeper sweeps upstream to YGI1.
- ___10 Sweeper checks fan vent barrier is fixed in place at YD14
- ___11 Sweeper ENDS SWEEP by turning the S/R013 SWEEP key CW in the SWEEP keyswitch on YGI1-I (YCS1) (map Y-2).
- ___12 Sweeper observes the yellow SWEEP lamp is lighted
- ___13 Sweeper contacts MCR for simultaneous release for gate YGI1.
- ___14 Sweeper sweeps out Y Line through YGI1.
- ___15 Sweeper resets gate YGI1 using the S/R013 key in the Reset keyswitch at YGI1 on W line side
- ___16 Sweeper observes the yellow RESET lamp is lighted
- ___17 Sweeper contacts MCR and confirms that gates are reset and Y line indicates sweep is good.

Note:

IF the AREA SECURED, and GATE RESET lamps are not lit THEN contact MCR to verify that gate(s) are reset and sweep is good

- ___18 After returning to MCR and verifying that all information is filled out completely, Sweeper files the checklist in FY_xx Sweep Log binder.